





**1) Install the CleanSpace SMART app on your mobile device:**


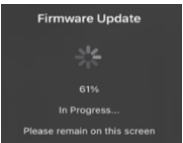

- Search for the "CleanSpace Smart" app on the Google Play Store (  Android) or Apple Store (  IOS).
- Confirm Bluetooth is turned on in your phone's settings.
- Access the app by selecting the "START IN GUEST MODE" button.

**2) Pair your CleanSpace CST device with the SMART app:**

- In the app, select the "Pair Unit" option, and then choose the CleanSpace unit you want to pair with.
- Make sure the CleanSpace CST device is in standby mode by pressing the "ON" button once.
- Once paired, the unit will beep and the "SET UP & CHECK" page will automatically appear.
- You will need to check the "Inspection Complete" option to access the *dashboard*.

**3) Update the CleanSpace CST device software:**

- Once in the *dashboard*, select "Filter information" (  Android) or "Filter change" (  IOS/Apple) at the bottom of the screen.
- If the software needs to be updated, it will appear on this page.
- Follow the steps to update the software:

|   |  |
|---|--|
|  | <p>Swipe right on the "Has device been doffed?" icon.<br/>                 Then press "Update Unit"</p>  |
|  | <p>The device software update will start, showing the progress of the process.</p>   |
|  | <p>The update has been completed.<br/>                 Follow the onscreen instructions.<br/>                 The CleanSpace CST update is complete.</p> |

Please contact [commercialsolutions@cleanspacetechnology.com](mailto:commercialsolutions@cleanspacetechnology.com) for further information.