


- The CleanSpace size guide cutout is designed to provide an easily accessible guide to help find the right mask for you.
- By aligning this guide with the base of your chin you will be able to see which size we suggest for you.

For a precise fit combine the information from the mask guide cutout with this sizing table

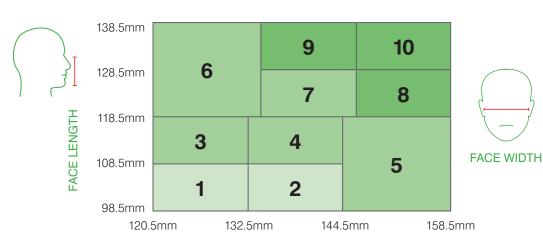

Fit Number	First Try	Then Try
1-2	Small	Medium
3-7	Medium	Small OR Large
8-10	Large	Medium

- \* On narrow faces, the action of pulling on the arms of the mask to tighten it causes the height of the mask to increase. The narrower the face, the more likely a smaller mask will be a better fit.
- \* Face should be relaxed when taking measurements
- \* No set of guidelines can ensure that you have the right size mask for your face. You must confirm the fit performed according to OSHA regulations 1910.134.









